









 

 






 





 



 







Original	Replacement
 Power	 Power
 CD	 Shift + 3
 Tape	 Shift + 5
 Tuner	 Shift + 6
 VID 1	 Shift + 1
 VID 2	 Shift + 2
 VID 3	 Shift + 4
 Red/Format	 Red / Netflix / Search
 Green/Sound	 Green / APP / Repeat
 Yellow/[]	 Yellow / YouTube / Repeat
 Blue/Timer	 Blue / Prime Video / Random
 Violet/PC	 TV/Radio /
 Exit	 Exit / Cancel / Clear
 Menu	 Menu / Home
 Up	 Up
 Down	 Down
 Right	 Right

Original	Replacement
 Left	 Left
 OK	 OK
 Vol+	 Vol+
 Vol-	 Vol-
 PR+	 CH+ / Page+
 PR-	 CH- / Page-
 Mute	 Mute / Dimmer
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0/--	 0





























 









Original	Replacement
AV	AV / Input / RDS
<</REW	<< / Tune-
Play	Play / Slow
>>/F.FWD	>> / Tune+
Rec	Rec / Rec Mode
Stop	Stop / Hold
Pause	Pause / Step / Freeze

Original	Replacement





Original	Replacement	Original	Replacement
Power		Power	
1		1	
2		2	
3		3	
4		4	
5		5	
6		6	
7		7	
8		8	
9		9	
0/--		0	
AV		AV / Input / RDS	
Mute		Mute / Dimmer	
Vol+		Vol+	
Vol-		Vol-	
PR+		CH+ / Page+	
PR-		CH- / Page-	

Original	Replacement	Original	Replacement
Menu		Menu / Home	
Exit		Exit / Cancel / Clear	
Up		Up	
Down		Down	
Left		Left	
Right		Right	
OK		OK	
Red/Format		Red / Netflix / Search	
Green/Sound		Green / APP / Repeat	
Yellow/[]		Yellow / YouTube / Repeat	
Blue/Timer		Blue / Prime Video / Random	
Violet/PC		TV/Radio /	
Stop		Stop / Hold	
Pause		Pause / Step / Freeze	
CD		Shift + 3	
VID 1		Eject / Surround	
Tape		Shift + 5	














































 


























Original	Replacement	Original	Replacement
VID 2	Subtitle / EQ		
Tuner	+ Shift + 6		
VID 3	Back / Return		
Play	Play / Slow		
>>/F.FWD	>> / Tune+		
<</REW	<< / Tune-		
Rec	Rec / Rec Mode		

Original	Replacement	Original	Replacement















Original	Replacement	Original	Replacement
Power		Power	
1		1	
2		2	
3		3	
4		4	
5		5	
6		6	
7		7	
8		8	
9		9	
0/--		0	
AV		AV / Input / RDS	
Mute		Mute / Dimmer	
Vol+		Vol+	
Vol-		Vol-	
PR+		CH+ / Page+	
PR-		CH- / Page-	

Original	Replacement	Original	Replacement
Menu		Menu / Home	
Exit		Exit / Cancel / Clear	
Down		Down	
Up		Up	
Left		Left	
Right		Right	
OK		OK	
Red/Format		Red / Netflix / Search	
Green/Sound		Green / APP / Repeat	
Yellow/[]		Yellow / YouTube / Repeat	
Blue/timer		Blue / Prime Video / Random	
Violet/PC		TV/Radio /	
Stop		Stop / Hold	
Pause		Pause / Step / Freeze	
Play		Play / Slow	
>>/F.FWD		>> / Tune+	
<</REW		<< / Tune-	





























 









Original	Replacement
Rec	 Rec / Rec Mode
CD	 +  Shift + 3
VID 1	 Eject / Surround
Tape	 +  Shift + 5
VID 2	 Subtitle / EQ
Tuner	 +  Shift + 6
VID 3	 Back / Return

Original	Replacement





Original	Replacement	Original	Replacement
Power		Power	
1		1	
2		2	
3		3	
4		4	
5		5	
6		6	
7		7	
8		8	
9		9	
0/--		0	
AV		AV / Input / RDS	
Mute		Mute / Dimmer	
Vol+		Vol+	
Vol-		Vol-	
PR+		CH+ / Page+	
PR-		CH- / Page-	

Original	Replacement	Original	Replacement
Menu		Menu / Home	
Exit		Exit / Cancel / Clear	
OK		OK	
Up		Up	
Down		Down	
Right		Right	
Left		Left	
Red/Format		Red / Netflix / Search	
Green/Sound		Green / APP / Repeat	
Yellow/[]		Yellow / YouTube / Repeat	
Blue/Timer		Blue / Prime Video / Random	
Violet/PC		TV/Radio /	
Play		Play / Slow	
>>/F.FWD		>> / Tune+	
<</REW		<< / Tune-	
Rec		Rec / Rec Mode	
Stop		Stop / Hold	





Original	Replacement	Original	Replacement
Pause	Pause / Step / Freeze		
CD	+ Shift + 3		
VID 1	Eject / Surround		
Tape	+ Shift + 5		
VID 2	Subtitle / EQ		
Tuner	+ Shift + 6		
VID 3	Back / Return		

Original	Replacement

