



 









 





 



 


 

 
 







 

 

 



 

 

 

 





 

 

 

 















 



 



 





 

 





 







Original	Replacement	Original	Replacement
 Power	 Power	 TV/Radio	 TV/Radio /
 Mute	 Mute / Dimmer	 Recall	 Back / Return
 1	 1	 Subtitle	 Subtitle / EQ
 2	 2	 Info	 Info / Angle
 3	 3	 FAV	 Fav / Marker / PC
 4	 4	 CH+	 CH+ / Page+
 5	 5	 Up	 Up
 6	 6	 Down	 Down
 7	 7	 CH-	 CH- / Page-
 8	 8	 Left	 Left
 9	 9	 Vol-	 Vol-
 0	 0	 Right	 Right
 DTV/VCR	 AV / Input / RDS	 Vol+	 Vol+
 Tv/Format	 Eject / Surround	 OK	 OK
 EPG	 Guide / EPG / -/--	 Menu	 Menu / Home
 L/R/Language	 Audio / Lang I/II	 Text	 Text / Goto
 Zoom	 Zoom / Size	 Exit	 Exit / Cancel / Clear

Original	Replacement	Original	Replacement
 Power	 Power	 TV/Radio	 TV/Radio /
 Mute	 Mute / Dimmer	 Recall	 Back / Return
 1	 1	 Subtitle	 Subtitle / EQ
 2	 2	 Info	 Info / Angle
 3	 3	 FAV	 Fav / Marker / PC
 4	 4	 CH+	 CH+ / Page+
 5	 5	 Up	 Up
 6	 6	 Down	 Down
 7	 7	 CH-	 CH- / Page-
 8	 8	 Left	 Left
 9	 9	 Vol-	 Vol-
 0	 0	 Right	 Right
 DTV/VCR	 AV / Input / RDS	 Vol+	 Vol+
 Tv/Format	 Eject / Surround	 OK	 OK
 EPG	 Guide / EPG / -/--	 Menu	 Menu / Home
 L/R/Language	 Audio / Lang I/II	 Text	 Text / Goto
 Zoom	 Zoom / Size	 Exit	 Exit / Cancel / Clear



