

 







 

 









 

 













Original	Replacement	Original	Replacement
	Power		Power
	Tv/Radio		TV/Radio /
	Source		AV / Input / RDS
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	OPT+		Setup / OPT /
	Guide		Info / Angle
	Exit		Audio / Lang I/II
	Back		Text / Goto



