















 



 



 



 

































 









Original	Replacement	Original	Replacement
 Power	 Power	 9	 9
 TV	 Shift + 1	 0	 0
 DVD	 Shift + 2	 Fav	 Fav / Marker / PC
 Scart	 Shift + 3	 Recall / +10	 Back / Return
 VGA	 Shift + 4	 Stereo / Audio	 Audio / Lang I/II
 P.M.	 Picture / Format	 Vol+	 Vol+
 S.M.	 Sound / Title	 CH+	 CH+ / Page+
 Set Fav	 Shift + Fav / Marker / PC	 Scan	 Smart / List
 Display	 Display / Media	 Mute	 Mute / Dimmer
 1	 1	 Vol-	 Vol-
 2	 2	 CH-	 CH- / Page-
 3	 3	 Subtitle	 Subtitle / EQ
 4	 4	 Exit	 Exit / Cancel / Clear
 5	 5	 Up	 Up
 6	 6	 Menu	 Menu / Home
 7	 7	 Left	 Left
 8	 8	 Enter	 OK



