









 

 

 

 





 



 



 



 



 



 



 







 



 

 

 

 








 

 



 







Original		Replacement		Original		Replacement	
	Power		Power		Vol+		Vol+
	Sleep		Sleep / Timer		Vol-		Vol-
	PlayTimer		Pause / Step / Freeze		Mute		Mute / Dimmer
	Clock/Timer		Shift + Sleep / Timer		Bluetooth		Shift + 9
	1		1		CD/USB		Red / Netflix / Search
	2		2		Radio/Ext-In		Green / APP / Repeat
	3		3		I<<		I<< / Preset-
	4		4		Play/Pause		Play / Slow
	5		5		>>I		>>I / Preset+
	6		6		<<		<< / Tune-
	7		7		Stop		Stop / Hold
	8		8		>>		>> / Tune+
	9		9		OK		OK
	0		0		D.Bass		Text / Goto
	DEL		Exit / Cancel / Clear		Sound		Sound / Title
	+10		Guide / EPG / ---		Preset EQ		AV / Input / RDS
	Program		TV/Radio /		Display		Display / Media

Program





Original	Replacement	Original	Replacement
 Dimmer	 Shift + Mute / Dimmer		
 Play Menu	 Shift + Display / Media		
 Setup	 Setup / OPT /		
 Radio Menu	 Menu / Home		
 Up Album	 Up		
 Down Album	 Down		
 Left	 Left		
 Right	 Right		

