

 















 




 



 

 



 









 

 

| Original  | Replacement  |
|---|--|
|  Standby   |  Power                        |
|  TV/STB    |  AV / Input / RDS             |
|  Mute      |  Mute / Dimmer                |
|  F.List    |  Display / Media              |
|  Repeat    |  Shift + Green / APP / REPEAT |
|  Res.      |  Shift + Picture / Format     |
|  Picture   |  Picture / Format             |
|  Book      |  Shift + Smart / List         |
|  Next Page |  Shift + Display / Media      |
|  R.Skip    |  I<< / Preset-                |
|  REW      |  << / Tune-                  |
|  FWD     |  >> / Tune+                 |
|  F.Skip  |  >>I / Preset+              |
|  Rec     |  Rec / Rec Mode             |
|  Stop    |  Stop / Hold                |
|  Play    |  Play / Slow                |
|  Pause   |  Pause / Step / Freeze      |

| Original   | Replacement   |
|--|---|
|  Menu       |  Menu / Home           |
|  Exit       |  Exit / Cancel / Clear |
|  CH/PG+     |  CH+ / Page+           |
|  CH/PG-     |  CH- / Page-           |
|  Up         |  Up                    |
|  Left       |  Left                  |
|  OK         |  OK                    |
|  Right      |  Right                 |
|  Down       |  Down                  |
|  Vol+       |  Vol+                  |
|  Vol-      |  Vol-                 |
|  Info     |  Info / Angle        |
|  EPG      |  Guide / EPG / -/-   |
|  Back     |  Back / Return       |
|  FAV      |  Fav / Marker / PC   |
|  SAT List |  Smart / List        |
|  Option   |  Setup / OPT /       |





| Original   | Replacement   |
|--|---|
|  TV/Radio       |  TV/Radio /  |
|  Zoom           |  Zoom / Size   |
|  F1             |  +  Shift + 1 |
|  Red / Audio    |  Red / Netflix / Search  |
|  Red / Audio    |  Audio / Lang I/II   |
|  Green / Subt   |  Subtitle / EQ   |
|  Yellow / Text  |  Yellow / YouTube / Repeat   |
|  Green / Subt   |  Green / APP / Repeat  |
|  Yellow / Text  |  Text / Goto   |
|  Blue / Sleep   |  Blue / Prime Video / Random   |
|  Blue / Sleep |  Sleep / Timer   |
|  1            |  1   |
|  2            |  2   |
|  3            |  3   |
|  4            |  4   |
|  5            |  5   |
|  6            |  6   |

| Original  | Replacement   |
|---|---|
|  7 |  7 |
|  8 |  8 |
|  9 |  9 |
|  0 |  0 |
|   |   |
|   |   |
|   |   |
|   |   |
|   |   |
|   |   |
|   |   |
|   |   |
|   |   |
|   |   |
|   |   |
|   |   |
|   |   |
|   |   |
|   |   |

