 










Original	Replacement	Original	Replacement
 Power	 Power	 Play	 Play / Slow
 Open/Close	 Eject / Surround	 Pause/Step	 Pause / Step / Freeze
 1	 1	 Stop	 Stop / Hold
 2	 2	 DVD Menu	 D.Menu / Top
 3	 3	 Title	 Sound / Title
 4	 4	 Up	 Up
 5	 5	 Enter	 OK
 6	 6	 Down	 Down
 7	 7	 Right	 Right
 8	 8	 Left	 Left
 9	 9	 Return	 Back / Return
 0	 0	 Display	 Display / Media
 Clear	 Exit / Cancel / Clear	 Audio	 Audio / Lang I/II
 <<	 << / Tune-	 Subtitle	 Subtitle / EQ
 >>	 >> / Tune+	 Angle	 Info / Angle
 I<<	 I<< / Preset-	 Setup	 Setup / OPT /
 >>I	 >>I / Preset+	 Marker	 Fav / Marker / PC



