 
 





 






















Original		Replacement		Original		Replacement	
	Power		Power		Play		Play / Slow
	Open/Close		Eject / Surround		Pause/Step		Pause / Step / Freeze
	1		1		Stop		Stop / Hold
	2		2		DVD Menu		D.Menu / Top
	3		3		Title		Sound / Title
	4		4		Up		Up
	5		5		Enter		OK
	6		6		Down		Down
	7		7		Right		Right
	8		8		Left		Left
	9		9		Return		Back / Return
	0		0		Display		Display / Media
	Clear		Exit / Cancel / Clear		Audio		Audio / Lang I/II
	<<		<< / Tune-		Subtitle		Subtitle / EQ
	>>		>> / Tune+		Angle		Info / Angle
	I<<		I<< / Preset-		Setup		Setup / OPT /
	>>I		>>I / Preset+		Marker		Fav / Marker / PC





	Original	Replacement	
	Search	 Red / Netflix / Search	
	Program	 Shift + TV/Radio / Program	
	Zoom	 Zoom / Size	
	Repeat	 Green / APP / Repeat	
	A-B	 Yellow / YouTube / Repeat	
	Resolution	 TV/Radio /	
	Karaoke ECHO	 Blue / Prime Video / Random	
	Power Tv	 Shift + Power	
	AV Tv	 AV / Input / RDS	
	PR/CH+ Tv	 CH+ / Page+	
	PR/CH- Tv	 CH- / Page-	
	Vol+ Tv	 Vol+	
	Vol- Tv	 Vol-	

Original	Replacement

