



Original	Replacement
Standby	Power
DTV / VCR	AV / Input / RDS
Mute	Mute / Dimmer
Menu	Menu / Home
Info	Info / Angle
EPG	Guide / EPG / /--
Pause	Pause / Step / Freeze
Stop / Exit	Exit / Cancel / Clear
Stop / Exit	Stop / Hold
Up / CH+ / Prev	Up
Up / CH+ / Prev	CH+ / Page+
Up / CH+ / Prev	I<< / Preset-
Left / Vol-	Left
Left / Vol-	Vol-
OK	OK
Right / Vol+	Right
Right / Vol+	Vol+

Original	Replacement
Down / CH- / Next	Down
Down / CH- / Next	>>I / Preset+
Down / CH- / Next	CH- / Page-
Favorite	Fav / Marker / PC
Timer	Sleep / Timer
Recall	Back / Return
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0
TV / Radio	TV/Radio /





Original	Replacement	Original	Replacement
AUDIO	Audio / Lang I/II		
Subtitle	Subtitle / EQ		
Text	Text / Goto		
Red / Album	Red / Netflix / Search		
Green / Music	Green / APP / Repeat		
Yellow / Movie	Yellow / YouTube / Repeat		
Blue / Multiscn	Blue / Prime Video / Random		

Original	Replacement

