

 

 



 

 

 

 





 

 











 













 

 

 





 

 

 
 
 







Original	Replacement
 Power	 Power
 Source	 AV / Input / RDS
 Caption	 Subtitle / EQ
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 -	 Eject / Surround
 0	 0
 PRE-CH	 Fav / Marker / PC
 Auto Prog.	 TV/Radio /
 FAV.CH	 Shift + Fav / Marker / PC

Original	Replacement
 ADD/Del	 D.Menu / Top
 Vol+	 Vol+
 Mute	 Mute / Dimmer
 CH+	 CH+ / Page+
 Vol-	 Vol-
 CH List	 Smart / List
 CH-	 CH- / Page-
 Menu	 Menu / Home
 MTS	 Display / Media
 Guide	 Guide / EPG / -/--
 Tools	 Setup / OPT /
 Up	 Up
 Info	 Info / Angle
 Left	 Left
 Enter	 OK
 Right	 Right
 Return	 Back / Return





Original	Replacement	Original	Replacement
	Down		Down
	Exit		Exit / Cancel / Clear
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	PIP		Text / Goto
	PIP CH-		I<< / Preset-
	PIP CH+		>>I / Preset+
	P.Mode		Picture / Format
	S.Mode		Sound / Title
	P.Size		Zoom / Size
	Still		Shift + Pause / Step / Step /
	Rec		Rec / Rec Mode
	Stop		Stop / Hold
	<<		<< / Tune-
	Pause		Pause / Step / Freeze
	Play		Play / Slow
	>>		>> / Tune+

