














































 

 

 

 





 
 









 
 
 
 
 
 


 
 


Original	Replacement	Original	Replacement
On/Off	 Power	Progr.	 TV/Radio /
Audio Off	 Mute / Dimmer	Top Menu	 D.Menu / Top
Play	 Play / Slow	Setup	 Setup / OPT /
Pause	 Pause / Step / Freeze	Digest	 Text / Goto
Stop	 Stop / Hold	Input Source	 AV / Input / RDS
Record	 Rec / Rec Mode	Menu	 Menu / Home
Rewind	 << / Tune-	Menu Up	 Up
F.Forward	 >> / Tune+	Info	 Info / Angle
Prev.	 I<< / Preset-	Menu Left	 Left
Next	 >>I / Preset+	OK Enter	 OK
Title	 Sound / Title	Menu Right	 Right
Audio	 Audio / Lang I/II	R/L	 Exit / Cancel / Clear
Subt.	 Subtitle / EQ	Menu Down	 Down
Open/Close	 Eject / Surround	Return	 Back / Return
Auto/Track	 Picture / Format	Volume+	 Vol+
Zoom	 Zoom / Size	DVD/TV	 Smart / List
Timer	 Sleep / Timer	Slow Up	 CH+ / Page+



Original	Replacement	Original	Replacement
Volume-	 Vol-	Rep/A-B	 Yellow / YouTube / Repeat
Display	 Display / Media	Random	 Blue / Prime Video / Random
Slow Down	 CH- / Page-	Resume	 Shift + Play /
1	 1	Karaoke/Step	 Shift + Pause / Step /
2	 2	Play/Back	 Shift + << /
3	 3	Lang	 Shift + Audio / Lang I/II
4	 4	Echo+	 Shift + Up
5	 5	Angle	 Shift + Info / Angle
6	 6	Echo-	 Shift + Down
7	 7	Shuffle	 Shift + Blue / Prime
8	 8		
9	 9		
+10	 Guide / EPG / -/--		
0	 0		
C/CH	 Fav / Marker / PC		
Pbc	 Red / Netflix / Search		
Repeat/1/All	 Green / APP / Repeat		

Original	Replacement	Original	Replacement
Rep/A-B	 Yellow / YouTube / Repeat	Random	 Blue / Prime Video / Random
Random	 Blue / Prime Video / Random	Resume	 Shift + Play /
Resume	 Shift + Play /	Karaoke/Step	 Shift + Pause / Step /
Karaoke/Step	 Shift + Pause / Step /	Play/Back	 Shift + << /
Play/Back	 Shift + << /	Lang	 Shift + Audio / Lang I/II
Lang	 Shift + Audio / Lang I/II	Echo+	 Shift + Up
Echo+	 Shift + Up	Angle	 Shift + Info / Angle
Angle	 Shift + Info / Angle	Echo-	 Shift + Down
Echo-	 Shift + Down	Shuffle	 Shift + Blue / Prime
Shuffle	 Shift + Blue / Prime		

