
















Original	Replacement	Original	Replacement
 Power	 Power	 Open/Close	 Eject / Surround
 Level+	 Vol+	 Time Mode	 Sleep / Timer
 Level-	 Vol-	 << Search	 << / Tune-
 1	 1	 Search >>	 >> / Tune+
 2	 2	 Pause	 Pause / Step / Freeze
 3	 3	 Stop	 Stop / Hold
 4	 4	 Play	 Play / Slow
 5	 5	 I<< Skip	 I<< / Preset-
 6	 6	 Skip >>I	 >>I / Preset+
 7	 7		
 8	 8		
 9	 9		
 0	 0		
 >10	 Guide / EPG / -/--		
 A-B Repeat	 Yellow / YouTube / Repeat		
 Repeat	 Green / APP / Repeat		
 Random	 Blue / Prime Video / Random		

