





































Original	Replacement
 Standby	 Power
 USB/Card	 Shift + 8
 Open/Close	 Eject / Surround
 Audio	 Audio / Lang I / II
 Subtitle	 Subtitle / EQ
 Search	 Red / Netflix / Search
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 Clear	 Exit / Cancel / Clear
 0/10	 0

Original	Replacement
 Menu	 Menu / Home
 Setup	 Setup / OPT /
 Display	 Display / Media
 Title	 Sound / Title
 Left	 Left
 Up	 Up
 Right	 Right
 Enter	 OK
 Down	 Down
 <<	 << / Tune-
 >>	 >> / Tune+
 I<<	 I<< / Preset-
 >>I	 >>I / Preset+
 Step	 Pause / Step / Freeze
 Stop	 Stop / Hold
 Play/Pause	 Play / Slow
 Vol+	 Vol+





	Original	Replacement	Original	Replacement
	Repeat	Green / APP / Repeat		
	A-B	Yellow / YouTube / Repeat		
	Angle	Info / Angle		
	Mute	Mute / Dimmer		
	Vol-	Vol-		
	L/R	AV / Input / RDS		
	N/P	Text / Goto		
	PBC	Smart / List		
	Slow	+ Shift + Play /		
	V-Mode	D.Menu / Top		
	Return	Back / Return		
	HD/Res.	Picture / Format		
	Program	TV/Radio /		
	Zoom	Zoom / Size		

