 

 
 
 
 
 

 
 
 

 

 



 

 
 




 

 
 
 







Original	Replacement
 Power	 Power
 Source Search	 Source
 Computer	 Comp / Video
 Video	 Shift + Mute / Blank
 USB	 Mode
 Lan	 Shift + Left
 Screen Fit 1	 Shift + Enter
 Screen Fit 1	 Shift + Mode
 2	 Shift + Play / +
 2D/3D 3	 Shift + Down
 2D/3D 3	 Volt / Focus
 4	 Shift + Auto
 5	 Shift + Stop / -
 6	 Shift + Info / Help
 Auto 7	 Eco / Aspect
 Auto 7	 Auto
 Aspect 3	 Shift + Menu

Original	Replacement
 8	 3D / Invert
 Color Mode 9	 Shift + Source
 Color Mode 9	 Shift + 3D /
 0	 Shift + Comp / Video
 Menu	 Menu
 Esc	 Shift + Power
 User	 Shift + Up
 Pointer	 Shift + Right
 Up	 Up
 Down	 Down
 Left	 Left
 Right	 Right
 Enter	 Enter
 Page+	 Shift + Vol + / Page +
 Page-	 Shift + Vol - / Page -
 E-Zoom+	 + / Play
 E-Zoom-	 - / Stop





Original	Replacement	Original	Replacement
Volume Vol+	Page Vol Vol + / Page +		
Volume Vol-	Page Vol Vol - / Page -		
A/V Mute AV Mute	Mute Blank Blank / Mute		
Freeze Freeze	Timer Freeze Freeze / Timer		
Help ?/Help	Info Help Help / Info		

