 



 

 

 





 

 

 

 













 

 



 

 

 



 

 

 





 






 






Original	Replacement	Original	Replacement
	Power		Power
	Source		AV / Input / RDS
	□		Shift + CH+ /
	□		Shift + Up
	Menu		Menu / Home
	Up		Up
	Left		Left
	OK		OK
	Right		Right
	Down		Down
	Exit		Exit / Cancel / Clear
	□		Shift + CH- /
	□		Shift + Down
	Vol +		Vol+
	More		Smart / List
	CH+		CH+ / Page+
	Vol -		Vol-
	[↔]		Picture / Format
	CH-		CH- / Page-
	Mute		Mute / Dimmer
	Back		Back / Return
	~		Green / APP / Repeat
	Play		Play / Slow
	I<		I<< / Preset-
	<<		<< / Tune-
	Pause		Pause / Step / Freeze
	>>		>> / Tune+
	>I		>>I / Preset+
	Stop		Stop / Hold
	1		1
	2		2
	3		3
	4		4
	5		5





Original	Replacement	Original	Replacement
6	6	TUNER 6	6
7	7	AUX - HDD 7	7
8	8	USB 8	8
9	9	BLUETOOTH 9	9
0	0	HDMI - BAT 0	0
TV Input	SHIFT + RDS AV INPUT		Shift + AV / Input / RDS

