






















 






 




Original	Replacement	Original	Replacement
 Operate	 Power	 Prog+	 CH+ / Page+
 Correct	 Back / Return	 Vol+ Tv	 Vol+
 Eject	 Eject / Surround	 Prog+ Tv	 Shift + CH+ /
 Enter	 OK	 0	 0
 Trans AUX	 Setup / OPT /	 Prog-	 CH- / Page-
 1	 1	 Vol- Tv	 Vol-
 2	 2	 Prog- Tv	 Shift + CH- /
 3	 3	 Menu	 Menu / Home
 4	 4	 Disp	 Display / Media
 5	 5	 Index	 Smart / List
 6	 6	 SP/LP	 Picture / Format
 VCR/TV	 TV/Radio /	 Count Clock	 Yellow / YouTube / Repeat
 Power Tv	 Shift + Power	 0000	 Exit / Cancel / Clear
 Mute Tv	 Mute / Dimmer	 I> Slow	 Red / Netflix / Search
 7	 7	 Rec	 Rec / Rec Mode
 8	 8	 Up	 Up
 9	 9	 CH 1/2	 Green / APP / Repeat





	Original	Replacement	Original	Replacement
	A.Dub	Text / Goto		
	V.Dub	AV / Input / RDS		
	--	Guide / EPG / -/--		
	Down	Down		
	Tracking Up	Right		
	Tracking Down	Left		
	Play	Play / Slow		
	<<	<< / Tune-		
	>>	>> / Tune+		
	Stop	Stop / Hold		
	Pause	Pause / Step / Freeze		
	Blue / Prime Video / Random	Blue / Prime Video / Random		
	REV	I<< / Preset-		
	FWD	>>I / Preset+		





Original	Replacement	Original	Replacement
 Operate	 Power	 Prog-	 CH- / Page-
 Correct	 Back / Return	 Menu	 Menu / Home
 Eject	 Eject / Surround	 Disp	 Display / Media
 Enter	 OK	 Index	 Smart / List
 Trans AUX	 Setup / OPT /	 SP/LP	 Picture / Format
 1	 1	 Count Clock	 Yellow / YouTube / Repeat
 2	 2	 0	 0
 3	 3	 I> Slow	 Red / Netflix / Search
 4	 4	 Rec	 Rec / Rec Mode
 5	 5	 Up	 Up
 6	 6	 CH 1/2	 Green / APP / Repeat
 VCR/TV	 TV/Radio /	 A.Dub	 Text / Goto
 7	 7	 V.Dub	 AV / Input / RDS
 8	 8	 --	 Guide / EPG / -/-
 9	 9	 Down	 Down
 Prog+	 CH+ / Page+	 Tracking Up	 Right
 0000	 Exit / Cancel / Clear	 Tracking Down	 Left





	Original	Replacement	Original	Replacement
	Play	Play / Slow		
	<<	<< / Tune-		
	>>	>> / Tune+		
	Stop	Stop / Hold		
	Pause	Pause / Step / Freeze		
	II>	Blue / Prime Video / Random		
	REV	I<< / Preset-		
	FWD	>>I / Preset+		

