










 



 












































 





Original	Replacement	Original	Replacement
 Power	 Power	 [=◆]/F.P.	 Menu / Home
 Mute	 Mute / Dimmer	 [=i]/Index	 Info / Angle
 []/Picture	 Picture / Format	 [=+]/Hold/Still	 Shift + Picture / Format
 [=J]/Sound	 Audio / Lang I/II	 [=≡]/Tv/Text	 Text / Goto
 Set Up	 Setup / OPT /	 OO	 D.Menu / Top
 Right	 Right	 [=+]/Aspect	 Zoom / Size
 Up	 Up	 []/Multiwindow	 Display / Media
 Left	 Left	 1	 1
 Down	 Down	 2	 2
 Vol-	 Vol-	 3	 3
 Vol+	 Vol+	 4	 4
 [=+]	 Smart / List	 5	 5
 Tv/AV	 AV / Input / RDS	 6	 6
 Red	 Red / Netflix / Search	 7	 7
 Green	 Green / APP / Repeat	 8	 8
 Yellow	 Yellow / YouTube / Repeat	 9	 9
 Blue	 Blue / Prime Video / Random	 0/VCR	 0





Original	Replacement
	Shift + Exit / Cancel / Clear
	Guide / EPG / -/--
	Play / Slow
	Stop / Hold
<< VCR button"/>	<< / Tune-
>> VCR button"/>	>> / Tune+
	Rec / Rec Mode
	Shift + Power
	Shift + Smart / List
	TV/Radio /
	Shift + 2
	Pause / Step / Freeze
	OK
	Shift + Down
	CH- / Page-
<< DVD button"/>	Shift + Left
	CH+ / Page+

Original	Replacement
	Shift + Right
	Exit / Cancel / Clear
	Sound / Title

