










 



 












































 





| Original | Replacement | Original | Replacement |
|---|---|---|--|
|  Power |  Power |  [=◆]/F.P. |  Menu / Home |
|  Mute |  Mute / Dimmer |  [=i]/Index |  Info / Angle |
|  []/Picture |  Picture / Format |  [=+]/Hold/Still |  Shift + Picture / Format |
|  [J]/Sound |  Audio / Lang I/II |  [=]/Tv/Text |  Text / Goto |
|  Set Up |  Setup / OPT / |  OO |  D.Menu / Top |
|  Right |  Right |  [+]/Aspect |  Zoom / Size |
|  Up |  Up |  []/Multiwindow |  Display / Media |
|  Left |  Left |  1 |  1 |
|  Down |  Down |  2 |  2 |
|  Vol- |  Vol- |  3 |  3 |
|  Vol+ |  Vol+ |  4 |  4 |
|  [+] |  Smart / List |  5 |  5 |
|  Tv/AV |  AV / Input / RDS |  6 |  6 |
|  Red |  Red / Netflix / Search |  7 |  7 |
|  Green |  Green / APP / Repeat |  8 |  8 |
|  Yellow |  Yellow / YouTube / Repeat |  9 |  9 |
|  Blue |  Blue / Prime Video / Random |  0/VCR |  0 |





| Original | Replacement |
|------------------|-------------------------------|
| | Shift + Exit / Cancel / Clear |
| | Guide / EPG / -/-- |
| | Play / Slow |
| | Stop / Hold |
| << VCR button"/> | << / Tune- |
| >> VCR button"/> | >> / Tune+ |
| | Rec / Rec Mode |
| | Shift + Power |
| | Shift + Smart / List |
| | TV/Radio / |
| | Shift + 2 |
| | Pause / Step / Freeze |
| | OK |
| | Shift + Down |
| | CH- / Page- |
| << DVD button"/> | Shift + Left |
| | CH+ / Page+ |

| Original | Replacement |
|----------|-----------------------|
| | Shift + Right |
| | Exit / Cancel / Clear |
| | Sound / Title |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |

