



Original	Replacement	Original	Replacement
 Standby	 Power	 CH-	 CH- / Page-
 Mute	 Mute / Dimmer	 Vol+	 Vol+
 P/N	 D.Menu / Top	 Vol-	 Vol-
 Play	 Play / Slow	 Info	 Info / Angle
 Pause	 Pause / Step / Freeze	 Return/Exit	 Back / Return
 Stop	 Stop / Hold	 Setup	 Setup / OPT /
 <<	 << / Tune-	 Source	 AV / Input / RDS
 >>	 >> / Tune+	 Goto	 Shift + Text /
 I<<	 I<< / Preset-	 1	 1
 >>I	 >>I / Preset+	 2	 2
 Zoom	 Zoom / Size	 3	 3
 Up	 Up	 4	 4
 Down	 Down	 5	 5
 Right	 Right	 6	 6
 Left	 Left	 7	 7
 OK	 OK	 8	 8
 CH+	 CH+ / Page+	 9	 9





Original	Replacement	Original	Replacement
	0		0
	Program		Shift + TV/Radio / Program
	Title/TTX		Text / Goto
	Audio		Audio / Lang I/II
	Subtitle		Subtitle / EQ
	Slow		Shift + Play /
	EPG		Guide / EPG / -/--
	Tv/Radio		TV/Radio /
	Open/Close		Eject / Surround
	Favorite		Fav / Marker / PC
	Red/Repeat		Red / Netflix / Search
	Green/A-B		Green / APP / Repeat
	Yellow/Menu		Yellow / YouTube / Repeat
	Blue/Angle		Blue / Prime Video / Random

