



Original		Replacement	
	Power		Power
	CD		3
	Tape 1/2		5
	Tuner		6
	AUX		7
	DBB		Guide / EPG / -/--
	DSC		Fav / Marker / PC
	Volume+		Vol+
	Volume-		Vol-
	Mute		Mute / Dimmer
	>		>> / Preset+
	<		<< / Preset-
	>>		>> / Tune+
	<<		<< / Tune-
	Program		TV/Radio /

Original	Replacement





Original		Replacement	
	Power		Power
	CD		3
	Tape 1/2		5
	Tuner		6
	AUX		7
	CD Direct 1		1
	CD Direct 2		2
	CD Direct 3		4
	DBB		Guide / EPG / -/--
	DSC		Fav / Marker / PC
	Volume+		Vol+
	Volume-		Vol-
	Mute		Mute / Dimmer
	Pause		Pause / Step / Freeze
	Play		Play / Slow
	>		>> / Preset+
	<		<< / Preset-

Original		Replacement	
	Stop		Stop / Hold
	>>		>> / Tune+
	<<		<< / Tune-
	Repeat		Green / APP / Repeat
	Shuffle		Blue / Prime Video / Random
	Program		TV/Radio /





Original	Replacement	Original	Replacement
	Power		Power
	CD		3
	Tape 1/2		5
	Tuner		6
	AUX		7
	DBB		Guide / EPG / -/--
	DSC		Fav / Marker / PC
	Volume+		Vol+
	Volume-		Vol-
	Mute		Mute / Dimmer
	Pause		Pause / Step / Freeze
	Play		Play / Slow
	>	>> button icon with Preset+"/>	>> / Preset+
	<		<< / Preset-
	Stop		Stop / Hold
	>>		>> / Tune+
	<<		<< / Tune-

Original	Replacement





	Original	Replacement		Original	Replacement
	Power	Power			
	CD	3			
	Tape 1/2	5			
	Tuner	6			
	AUX	7			
	DBB	Guide / EPG / -/--			
	DSC	Fav / Marker / PC			
	Volume+	Vol+			
	Volume-	Vol-			
	Mute	Mute / Dimmer			

