


Original	Replacement	Original	Replacement
	Power		Power
	TV		Smart / List
	Text		Text / Goto
	Source 2		Shift + AV / Input / RDS
	Source 1		AV / Input / RDS
	1		1
	2		2
	3		3
	Contrast-		I<< / Preset-
	Contrast+		>>I / Preset+
	4		4
	5		5
	6		6
	Brightness-		Down
	Brightness+		Up
	7		7
	8		8
	9		9
	Sol-		<< / Tune-
	Sol+		>> / Tune+
	=<		Shift + CH- /
	0		0
	-/ / =>		Shift + CH+ /
	-/ / =>		Guide / EPG / -/-
	Fa-		Left
	Fa+		Right
	Vol-		Vol-
	Vol+		Vol+
	><-		CH- / Page-
	><+		CH+ / Page+
	OO		Sound / Title
	I-II		Audio / Lang I/II
	[]		Zoom / Size
	Mute		Mute / Dimmer

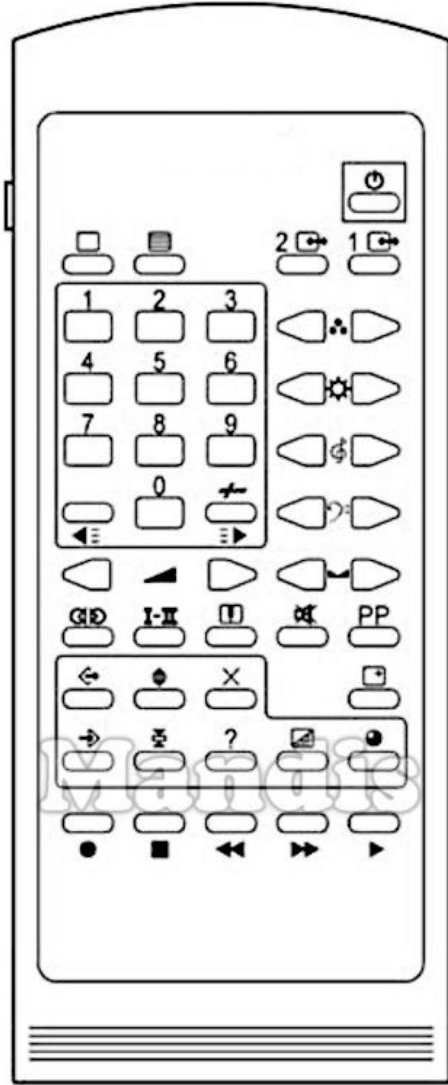



	Original	Replacement		Original	Replacement
	PP	 Back / Return			
	Exit	 Exit / Cancel / Clear			
	Size	 +  Shift + Zoom /			
	Cancel	 +  Shift + Exit / Cancel / Clear			
	[+]	 Info / Angle			
	Enter	 OK			
	Hold	 Stop / Hold			
	Reveal	 TV/Radio /			
	Mix	 +  Shift + Text /			
	Subcode	 Subtitle / EQ			

