


 





 

 



 

















































 
 
Original	Replacement	Original	Replacement
 Power	 Power	 Subtitle	 Subtitle / EQ
 Open/Close	 Text / Goto	 Angle	 Red / Netflix / Search
 1	 1	 Sur	 Eject / Surround
 2	 2	 Search Mode	 AV / Input / RDS
 3	 3	 Repeat	 Shift + Setup / OPT / Tools
 4	 4	 A-B	 Shift + Play /
 5	 5	 Shuffle	 Yellow / YouTube / Repeat
 6	 6	 SA-CD	 Smart / List
 7	 7	 Album+	 CH+ / Page+
 8	 8	 Album-	 CH- / Page-
 9	 9	 Zoom	 Shift + Text /
 0	 0	 Picture Navi	 Zoom / Size
 Clear	 Exit / Cancel / Clear	 >>	 >> / Preset+
 Enter	 Fav / Marker / PC	 <<	 << / Tune-
 Time/Text	 Setup / OPT /	 >> / >	 << / Preset-
 Picture Mode	 Sleep / Timer	 << / <	 >> / Tune+
 Audio	 Audio / Lang I/II	 ← / <	 Shift + << /

Original	Replacement	Original	Replacement
 Subtle	 Subtitle / EQ	 Angle	 Red / Netflix / Search
 Sur	 Eject / Surround	 Search Mode	 AV / Input / RDS
 Repeat	 Shift + Setup / OPT / Tools	 A-B	 Shift + Play /
 Shuffle	 Yellow / YouTube / Repeat	 SA-CD	 Smart / List
 Album+	 CH+ / Page+	 Album-	 CH- / Page-
 Zoom	 Shift + Text /	 Picture Navi	 Zoom / Size
 >>	 >> / Preset+	 <<	 << / Tune-
 <<	 << / Preset-	 >> / >	 >> / Tune+
 << / <	 Shift + << /	 ← / <	 Shift + << /

Tune-

 




Original	Replacement	Original	Replacement
	> / →	 + 	Shift + >> / Preset+
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Enter		OK
	Display		Info / Angle
	Menu		Menu / Home
	Top Menu	 + 	Shift + Menu /
	Return		Back / Return
	Stop		Stop / Hold
	SA-CD/CD		Display / Media





Original	Replacement	Original	Replacement
	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Enter		OK
	Input		AV / Input / RDS
	Vol+		Vol+
	Vol-		Vol-

Original	Replacement	Original	Replacement

