
































Original	Replacement	
On/Off		Power
Mute		Mute / Dimmer
Update		Play / Slow
Txt Stop		Stop / Hold
Menu audio		Audio / Lang I/II
Subt.List		Subtitle / EQ
Txt Expand		Zoom / Size
Sleep Timer		Sleep / Timer
Return TV		TV/Radio /
Menu video		D.Menu / Top
Text		Text / Goto
TV/AV		AV / Input / RDS
Menu		Menu / Home
Menu Up		Up
Info		Info / Angle
Menu Left		Left
Menu Right		Right

Original	Replacement	
Menu Down		Down
Volume+		Vol+
Chan.Up		CH+ / Page+
Volume-		Vol-
Chan.Down		CH- / Page-
1		1
2		2
3		3
4		4
5		5
6		6
7		7
8		8
9		9
0/10		0
2.Fav P/C 2.		Fav / Marker / PC
Red		Red / Netflix / Search



Original	Replacement	Original	Replacement
Green	 Green / APP / Repeat		
Yellow	 Yellow / YouTube / Repeat		
Blue	 Blue / Prime Video / Random		

