



| Original | Replacement |
|-------------|--------------------------|
| Power | Power |
| Power TV | + Shift + Power |
| Tv Vol+ | Vol+ |
| Open/Close | Eject / Surround |
| AV Input TV | AV / Input / RDS |
| Tv Vol- | Vol- |
| Internet | Smart / List |
| 1 | 1 |
| 2 | 2 |
| 3 | 3 |
| Skype | + Shift + Green / APP / |
| 4 | 4 |
| 5 | 5 |
| 6 | 6 |
| 3D | + Shift + 3 |
| 7 | 7 |
| 8 | 8 |

| Original | Replacement |
|-------------|----------------------------------|
| 9 | 9 |
| PIP | Picture / Format |
| Cancel | + Shift + Exit / Cancel / Clear |
| 0 | 0 |
| Audio | Audio / Lang I/II |
| Secondary | Sound / Title |
| << Search | << / Tune- |
| Play | Play / Slow |
| Search >> | >> / Tune+ |
| I<< Skip | I<< / Preset- |
| Pause | Pause / Step / Freeze |
| Skip >>I | >>I / Preset+ |
| Status | Info / Angle |
| Stop | Stop / Hold |
| Exit | Exit / Cancel / Clear |
| Pop-Up Menu | Display / Media |
| Top Menu | D.Menu / Top |



