



 


 







 







 

 



 

 






 

 
 




















Original	Replacement	Original	Replacement
 Power	 Power	 Muto / Normal	 Mute / Dimmer
 1	 1	 Timer Rec	 D.Menu / Top
 2	 2	 Prog. CFM	 TV/Radio /
 3	 3	 CAF	 Info / Angle
 Canali+	 CH+ / Page+	 Menu	 Menu / Home
 4	 4	 Counter	 Red / Netflix / Search
 5	 5	 Counter Reset	 Green / APP / Repeat
 6	 6	 Ricerca Set-	 Left
 Canali-	 CH- / Page-	 Ricerca Set+	 Right
 7	 7	 Auto Tracking	 Smart / List
 8	 8	 Tracking	 Down
 9	 9	 Tracking	 Up
 Volume+	 Vol+	 Invio	 OK
 0	 0	 Cancel	 Exit / Cancel / Clear
 Prec.	 Back / Return	 Slow	 Shift + Play /
 Riposo	 Sleep / Timer	 Index	 Picture / Format
 Volume-	 Vol-	 Clock	 Setup / OPT /



