





































Original	Replacement
	 Power
	 Mute / Dimmer
	 Play / Slow
	 Pause / Step / Freeze
	 Stop / Hold
	 << / Tune-
	 >> / Tune+
	 AD/Subt. / Audio / Lang I/II
	 Text / Goto
	 TV/Radio /
	 Setup / OPT /
	 AV / Input / RDS
	 Menu / Home
	 Up
	 Info / Angle
	 Left
	 OK

Original	Replacement
	 Right
	 Exit / Cancel / Clear
	 Fav / Marker / PC
	 Down
	 Vol+
	 Smart / List
	 CH+ / Page+
	 Vol-
	 CH- / Page-
	 1
	 2
	 3
	 4
	 5
	 6
	 7
	 8





Original	Replacement
9	9
GUIDE	Guide / EPG / -/--
0	0
Red	Red / Netflix / Search
Green	Green / APP / Repeat
Yellow	Yellow / YouTube / Repeat
Blue	Blue / Prime Video / Random
Return	Back / Return
Netflix	Shift + Red / Netflix /
video prime	Shift + Blue / Prime / Prime

Original	Replacement

