 

 



































Original	Replacement	Original	Replacement
	Power		Power
	Mute		Mute / Dimmer
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Tv Guide		Guide / EPG / -/--
	Recall		Shift + Back / Return
	Picture		Picture / Format
	Sound		Sound / Title
	Source		AV / Input / RDS

Original	Replacement	Original	Replacement
	Vol+		Vol+
	Vol-		Vol-
	CH+		CH+ / Page+
	CH-		CH- / Page-
	Menu		Menu / Home
	Exit		Exit / Cancel / Clear
	Back		Back / Return
	FAV		Fav / Marker / PC
	Up		Up
	Down		Down
	Left		Left
	Right		Right
	OK		OK
	Info		Info / Angle
	Text		Text / Goto
	Subtitle		Subtitle / EQ
	TV		TV/Radio /





Original	Replacement
YouTube	Shift + Yellow / YouTube /
Netflix	Shift + Red / Netflix /
Smart	Smart / List
Rec/DVD Menu	Rec / Rec Mode
I<<	I<< / Preset-
>>I	>>I / Preset+
Stop	Stop / Hold
Rec List/DVD	Setup / OPT /
<<	<< / Tune-
>>	>> / Tune+
Play	Play / Slow
Pause	Pause / Step / Freeze
Red/Goto	Red / Netflix / Search
Green/A-B	Green / APP / Repeat
Yellow/Angle	Yellow / YouTube / Repeat
Blue/Repeat	Blue / Prime Video / Random

Original	Replacement

