





Original	Replacement	Original	Replacement
	Power		Power
	Input		AV / Input / RDS
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	[≡]		Text / Goto
	Up		Up
	Left		Left
	OK		OK
	Right		Right
	Down		Down
	Menu		Menu / Home
	Vol+		Vol+
	P+		CH+ / Page+
	Vol-		Vol-
	Mute		Mute / Dimmer
	P-		CH- / Page-
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	[i+]		Info / Angle
	0		0
	P<P		Back / Return
	Hold		Stop / Hold
	I-II		Audio / Lang I/II
	[-o-] Active Control		Smart / List
	[<>]		D.Menu / Top





Original

Replacement

SMART 	♪/Smart	TITLE SOUND	Sound / Title
SMART 	[]/Smart	FORMAT PICTURE	Picture / Format




















 

 
 
Original

Replacement



















Original	Replacement
 Power	 Power
 Source	 AV / Input / RDS
 >>	 >> / Tune+
 <<	 << / Tune-
 Stop	 Stop / Hold
 Play	 Play / Slow
 Pause	 Pause / Step / Freeze
 [=]	 Text / Goto
 Up	 Up
 Left	 Left
 OK	 OK
 Right	 Right
 Down	 Down
 Menu	 Menu / Home
 Vol+	 Vol+
 P+	 CH+ / Page+
 Vol-	 Vol-

Original	Replacement
 Mute	 Mute / Dimmer
 P-	 CH- / Page-
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 [i+]	 Info / Angle
 0	 0
 P<P	 Back / Return
 I-II	 Audio / Lang I/II
 [<>]	 Picture / Format











 













Original	Replacement
	 Power
	 AV / Input / RDS
	 Red / Netflix / Search
	 Green / APP / Repeat
	 Yellow / YouTube / Repeat
	 Blue / Prime Video / Random
	 Up
	 Left
	 OK
	 Right
	 Down
	 Menu / Home
	 CH+ / Page+
	 CH- / Page-
	 1
	 2
	 3

Original	Replacement
	 4
	 5
	 6
	 7
	 8
	 9
	 0





Original	Replacement
 Power	 Power
 Power AMP	 Shift + Power
 Source	 AV / Input / RDS
 >>	 >> / Tune+
 >> AMP	 >>I / Preset+
 Red	 Red / Netflix / Search
 Rec	 Rec / Rec Mode
 << AMP	 I<< / Preset-
 Green	 Green / APP / Repeat
 <<	 << / Tune-
 Yellow	 Yellow / YouTube / Repeat
 Stop	 Stop / Hold
 Blue	 Blue / Prime Video / Random
 Play	 Play / Slow
 Pause AMP	 Pause / Step / Freeze
 [≡] AMP	 Text / Goto
 Up AMP	 Shift + Up

Original	Replacement
 Up	 Up
 Left	 Left
 Left AMP	 Shift + Left
 OK	 OK
 OK AMP	 Shift + OK
 Right	 Right
 Right AMP	 Shift + Right
 Down	 Down
 Down AMP	 Shift + Down
 Menu	 Menu / Home
 Menu AMP	 D.Menu / Top
 Vol+ AMP	 Shift + Smart / List
 Vol+	 Vol+
 P+	 CH+ / Page+
 P+ AMP	 Shift + CH+ /
 Vol-	 Vol-
 Mute AMP	 Shift + Mute / Dimmer





Original	Replacement
	Mute / Dimmer
	Shift + CH PAGE / CH- /
	CH PAGE / CH- / Page-
	Shift + TV 1 / 1
	1
	Shift + DVD 2 / 2
	2
	Shift + CD- STB 3 / 3
	3
	Shift + VIDEO 4 / 4
	4
	Shift + TAPE 5 / 5
	5
	Shift + TUNER 6 / 6
	6
	Shift + AUX - HDD 7 / 7
	7

Original	Replacement
	Shift + USB 8 / 8
	8
	Shift + BLUETOOTH 9 / 9
	9
	ANGLE INFO / Info / Angle
	Shift + HDMI - BAT 0 / 0
	0
	PC FAV MARKER / Fav / Marker / PC
	Shift + HOLD / Stop /
	LANG I/II AUDIO / Audio / Lang I/II
	FORMAT PICTURE / Picture / Format
	LIST SMART / Smart / List
	MEDIA DISPLAY / Display / Media

