


 





































 



Original	Replacement	Original	Replacement
PWR On/Off	 Power	Menu Down	 Down
Mute	 Mute / Dimmer	Back	 Back / Return
Audio	 Audio / Lang I/II	Volume+	 Vol+
Subt.List	 Subtitle / EQ	TV	 Smart / List
Zoom	 Zoom / Size	CH/Page+	 CH+ / Page+
Sleep Timer	 Sleep / Timer	Volume-	 Vol-
TV	 TV/Radio /	Display	 Display / Media
Opt?	 Setup / OPT /	CH/Page-	 CH- / Page-
Text	 Text / Goto	1. ?	 1
TV/SAT	 AV / Input / RDS	2abc	 2
Menu	 Menu / Home	3def	 3
Menu Up	 Up	4ghi	 4
Info	 Info / Angle	5jkl	 5
Menu Left	 Left	6mno	 6
OK Enter	 OK	7pqrm	 7
Menu Right	 Right	8tuv	 8
Exit	 Exit / Cancel / Clear	9wxyz	 9



Original	Replacement		Replacement
Guide Pilote		Guide / EPG / -/--	
0/10		0	
FAV Pref.		Fav / Marker / PC	
Red		Red / Netflix / Search	
Green		Green / APP / Repeat	
Yellow		Yellow / YouTube / Repeat	
Blue		Blue / Prime Video / Random	
TV		Shift + 1	
Epg		Shift + Guide / EPG / -/--	

Original	Replacement

