 



 







 

 

 



 
 


 

 

 

 



 



























 









Original	Replacement	Original	Replacement
	Power		Power
	Mute		Mute / Dimmer
	EQ		Subtitle / EQ
	1		1
	2		2
	3		3
	OSD		Display / Media
	4		4
	5		5
	6		6
	L/R		Red / Netflix / Search
	7		7
	8		8
	9		9
	P/N		Picture / Format
	Repeat		Green / APP / Repeat
	0/10		0
	10+		Guide / EPG / -/-
	Zoom		Text / Goto
	TV-Mode		TV/Radio /
	I<<		<< / Tune-
	>>I		>>I / Preset+
	Stop		Stop / Hold
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	<<		>> / Tune+
	>>		I<< / Preset-
	USB/Card		Shift + 8
	Up		Up
	Menu		Menu / Home
	Left		Left
	Enter		OK
	Right		Right
	Return		Back / Return





Original	Replacement	Original	Replacement
	Down		Down
	Setup		Setup / OPT /
	Reset		Exit / Cancel / Clear
	Treb+	+	Shift + Up
	Sub+		CH+ / Page+
	Vol+		Vol+
	Input		AV / Input / RDS
	Treb-	+	Shift + Down
	Sub-		CH- / Page-
	Vol-		Vol-

