





































Original	Replacement
 Power	 Power
 Mute	 Mute / Dimmer
 Sleep	 Sleep / Timer
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 Rec	 Rec / Rec Mode
 0/AV	 0
 Tv/Radio	 TV/Radio /
 <<	 << / Tune-
 Stop/DVR	 Stop / Hold

Original	Replacement
 Play	 Play / Slow
 Pause	 Pause / Step / Freeze
 >>	 >> / Tune+
 SFI	 Smart / List
 Up	 Up
 WWW	 Display / Media
 ↑	 >> / Preset+
 Left	 Left
 OK	 OK
 Right	 Right
 ↓	 << / Preset-
 Zurück	 Back / Return
 Down	 Down
 Info/VOR	 Info / Angle
 P+	 CH+ / Page+
 OPT	 Setup / OPT /
 Vol+	 Vol+







































Original	Replacement
	CH- / Page-
	D.Menu / Top
	Vol-
	Red / Netflix / Search
	Green / APP / Repeat
	Yellow / YouTube / Repeat
	Blue / Prime Video / Random
	Menu / Home
	Shift + Sleep / Timer
	Audio / Lang I/II
	Zoom / Size
	Text / Goto
	Fav / Marker / PC
	Shift + 0
	Picture / Format

Original	Replacement





 


 





 





Original	Replacement
 Power	 Power
 Mute	 Mute / Dimmer
 Sleep	 Sleep / Timer
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 Rec	 Rec / Rec Mode
 0/AV	 0
 Tv/Radio	 TV/Radio /
 <<	 << / Tune-
 Stop/DVR	 Stop / Hold

Original	Replacement
 Play	 Play / Slow
 Pause	 Pause / Step / Freeze
 >>	 >> / Tune+
 SFI	 Smart / List
 Up	 Up
 WWW	 Display / Media
 ↑	 >> / Preset+
 Left	 Left
 OK	 OK
 Right	 Right
 ↓	 << / Preset-
 Zurück	 Back / Return
 Down	 Down
 Info/VOR	 Info / Angle
 P+	 CH+ / Page+
 OPT	 Setup / OPT /
 Vol+	 Vol+







































Original	Replacement	Original	Replacement
	P-		CH- / Page-
	NAV		D.Menu / Top
	Vol-		Vol-
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	Menu		Menu / Home
	Timer		Shift + Sleep / Timer
	Ton		Audio / Lang I/II
	Zoom		Zoom / Size
	TXT		Text / Goto
	>/Still		Fav / Marker / PC
	HDMI		Shift + 0
	PIP		Picture / Format

Original	Replacement





Original	Replacement
 Power	 Power
 Mute	 Mute / Dimmer
 Sleep	 Sleep / Timer
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 Rec	 Rec / Rec Mode
 0/AV	 0
 Tv/Radio	 TV/Radio /
 <<	 << / Tune-
 Stop/DVR	 Stop / Hold

Original	Replacement
 Play	 Play / Slow
 Pause	 Pause / Step / Freeze
 >>	 >> / Tune+
 SFI	 Smart / List
 Up	 Up
 WWW	 Display / Media
 ↑	 >> / Preset+
 Left	 Left
 OK	 OK
 Right	 Right
 ↓	 << / Preset-
 Zurück	 Back / Return
 Down	 Down
 Info/VOR	 Info / Angle
 P+	 CH+ / Page+
 OPT	 Setup / OPT /
 Vol+	 Vol+





Original		Replacement	
	P-		CH- / Page-
	NAV		D.Menu / Top
	Vol-		Vol-
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	Menu		Menu / Home
	Timer		Shift + Sleep / Timer
	Ton		Audio / Lang I/II
	Zoom		Zoom / Size
	TXT		Text / Goto
	I>/Still		Fav / Marker / PC
	HDMI		Shift + 0
	PIP		Picture / Format

Original	Replacement

