



 
 














 














Original	Replacement
	 Power
	 Mute / Dimmer
	 Play / Slow
	 Pause / Step / Freeze
	 Stop / Hold
	 Rec / Rec Mode
	 << / Tune-
	 >> / Tune+
	 I<< / Preset-
	 >>I / Preset+
	 Setup / OPT /
	 */Options Menu / Home
	 Up
	 [ ]/Display Info / Angle
	 I> Left
	 OK OK
	 X/Cancel Exit / Cancel / Clear

Original	Replacement
	 Down
	 Back / Return
	 Vol+
	 Smart / List
	 Vol-
	 Display / Media
	 1
	 2
	 3
	 4
	 5
	 6
	 7
	 8
	 9
	 0
	 Shift + Pause / Step / Freeze

