








 




Original	Replacement
	 Shift + Power
	 Power
	 Sleep / Timer
	 Fav / Marker / PC
	 6
	 3
	 Guide / EPG / -/-
	 7
	 0
	 5
	 8
	 1
	 4
	 9
	 2
	 Vol+
	 Vol-

Original	Replacement
	 Mute / Dimmer
	 Up
	 Menu / Home
	 Setup / OPT /
	 Left
	 OK
	 Right
	 Back / Return
	 Down
	 Display / Media
	 TV/Radio /
	 Sound / Title
	 Audio / Lang I/II
	 Zoom / Size
	 Picture / Format
	 Subtitle / EQ
	 AV / Input / RDS





Original		Replacement		Original		Replacement	
	Power		Power		6		6
	Vol+		Vol+		7		7
	Vol-		Vol-		8		8
	Mute		Mute / Dimmer		9		9
	Preset Up		Up		0		0
	Preset Up		>>I / Preset+		ENT		Fav / Marker / PC
	Left A/B/C/D/E		Left		Freq/RDS		Play / Slow
	Enter		OK		Eon		Pause / Step / Freeze
	Right A/B/C/D/E		Right		Mode PTY Seek		<< / Tune-
	Preset Down		I<< / Preset-		PTY Seek Start		>> / Tune+
	Preset Down		Down				
	Display		Display / Media				
	1		1				
	2		2				
	3		3				
	4		4				
	5		5				

