



Original	Replacement	Original	Replacement
	Stop / Hold		
	Play / Slow		
	Display / Media		
	<< / Preset-		
	>>  / Preset+		
	Pause / Step / Freeze		
	OK		
	Exit / Cancel / Clear		
	Audio / Lang I/II		
	3		
	6		
	5		
	Power		
	Vol-		
	Vol+		

Original	Replacement	Original	Replacement

