



Original	Replacement
 1-2-3 Menu	 TV/Radio /
 Eject	 Eject / Surround
 Encore	 Smart / List
 Power	 Power
 1	 1
 2	 2
 3	 3
 Cancel	 Exit / Cancel / Clear
 4	 4
 5	 5
 6	 6
 SP/LP	 Setup / OPT /
 7	 7
 8	 8
 9	 9
 -/--	 Guide / EPG / -/--
 0	 0

Original	Replacement
 OK/Prog	 OK
 Data On Screen	 Display / Media
 AV	 AV / Input / RDS
 Vol+	 Vol+
 Tv Chanel+	 CH+ / Page+
 Counter Reset	 Back / Return
 Tv Power	 Shift + Power
 Vol-	 Vol-
 Tv Channel-	 CH- / Page-
 <<	 << / Tune-
 Play	 Play / Slow
 Stop	 Stop / Hold
 >>	 >> / Tune+
 Rec	 Rec / Rec Mode
 Menu	 Menu / Home
 Pause	 Pause / Step / Freeze
 <  Shuttle/Index	 I<< / Preset-





Original		Replacement	
	▼Jog/-		Down
	▲Jog/+		Up
	Shuttle/Index I>		>>I / Preset+

Original		Replacement	

