



Original	Replacement
 Standby	 Power
 Auto / Eject	 Eject / Surround
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 -/--	 Guide / EPG / -/--
 Back	 Back / Return
 Vol+	 Vol+
 Title	 Shift + Sound / Title
 Menu	 D.Menu / Top

Original	Replacement
 CH+	 CH+ / Page+
 Vol-	 Vol-
 Display	 Display / Media
 CH-	 CH- / Page-
 Up	 Up
 Left	 Left
 Enter	 OK
 Right	 Right
 LCD Menu	 Menu / Home
 Down	 Down
 DVD Setup / Exit	 Setup / OPT /
 DVD Setup / Exit	 Exit / Cancel / Clear
 Input	 AV / Input / RDS
 P.Mode	 Picture / Format
 S.Mode	 Sound / Title
 Mute	 Mute / Dimmer
 Play / Pause	 Play / Slow















 

 





 

 

 

 
 

 

 



Original	Replacement
Stop	Stop / Hold
Slow / Step	Shift + Play /
Slow / Step	Shift + Pause / Step /
Audio / Nicam	Audio / Lang I/II
Text / <<	Text / Goto
Text / <<	<< / Tune-
>> / Mix	>> / Tune+
Hold / Goto	Shift + Text /
Hold / Goto	Shift + Stop /
Subpage /	Info / Angle
I<< / Index	I<< / Preset-
>>I / Size	Shift + Zoom /
>>I / Size	>>I / Preset+
Reveal / Zoom	Zoom / Size
Picture / Subtitle	Shift + Picture / Format
Picture / Subtitle	Subtitle / EQ
Red / Program	Red / Netflix / Search

Original	Replacement
Red / Program	TV/Radio /
Green / Intro	Green / APP / Repeat
Yellow / Repeat	Yellow / YouTube / Repeat
Yellow / Repeat	Shift + Green / APP /
Blue / A-B	Blue / Prime Video / Random
Blue / A-B	Shift + Yellow / YouTube /






Original	Replacement
	 Power
	 Mute / Dimmer
	 Play / Slow
	 Pause / Step / Freeze
	 Stop / Hold
	 << / Tune-
	 >> / Tune+
	 I<< / Preset-
	 >>I / Preset+
	 S.Mode / Sound / Title
	 Audio/Reveal / Audio / Lang I/II
	 Zoom/Subpage / Subtitle / EQ
	 P.Mode / Picture / Format
	 Size / Zoom / Size
	 Sleep / Sleep / Timer
	 D.Menu / Top
	 Text / Goto

Original	Replacement
	 AV / Input / RDS
	 Menu / Home
	 Up
	 Info / Angle
	 Left
	 OK
	 Right
	 Down
	 Back / Return
	 Vol+
	 Smart / List
	 CH+ / Page+
	 Vol-
	 Display / Media
	 CH- / Page-
	 1
	 2





Original	Replacement
	 3
	 4
	 5
	 6
	 7
	 8
	 9
	 Guide / EPG / -/--
	 0
	 Fav / Marker / PC
	 Red / Netflix / Search
	 Green / APP / Repeat
	 Yellow / YouTube / Repeat
	 Blue / Prime Video / Random
Hold	 +  Shift + Stop /
Title	 +  Shift + Sound / Title
Nicam	 +  Shift + Audio / Lang I/II

Original	Replacement
Aspect	 +  Shift + Picture / Format
D.Subt.	 +  Shift + Zoom /
Goto	 +  Shift + Text /
Angle	 +  Shift + Info / Angle
Slow/PgUp	 +  Shift + CH+ /
D.Disp	 +  Shift + Display / Media
Step/PgDn	 +  Shift + CH- /

