



Original	Replacement	Original	Replacement
Standby	Power	Zoom	Zoom / Size
Open/Close	Eject / Surround	0/10	0
Goto	Shift + Text /	10+	Guide / EPG / -/-
Step	Shift + Pause / Step /	A-B	Yellow / YouTube / Repeat
Prog	TV/Radio /	OSD	Display / Media
Mute	Mute / Dimmer	Return	Back / Return
1	1	Repeat	Green / APP / Repeat
2	2	Menu	Menu / Home
3	3	Volume+	Vol+
Audio	Audio / Lang I/II	Angle	Info / Angle
4	4	Video	Shift + 4
5	5	Slow	Shift + Play /
6	6	Volume-	Vol-
Subtitle	Subtitle / EQ	Setup	Setup / OPT /
7	7	Up	Up
8	8	L/R	Text / Goto
9	9	Left	Left



