

















Original		Replacement		Original		Replacement	
	POWER		Power		ANGLE		Info / Angle
	SOURCE		AV / Input / RDS		AUDIO		Audio / Lang I/II
	DVD/CARD/USB		Smart / List		PBC		Picture / Format
	MUTE		Mute / Dimmer		TITLE		Sound / Title
	1		1		UP		Up
	2		2		STOP		Stop / Hold
	3		3		PLAY/PAUSE		Play / Slow
	4		4		LEFT		Left
	5		5		ENTER		OK
	6		6		RIGHT		Right
	7		7		MODE		D.Menu / Top
	8		8		SETUP		Setup / OPT /
	9		9		DOWN		Down
	0		0		ZOOM		Zoom / Size
	10+		Guide / EPG / -/--		MENU		Menu / Home
	GOTO		Text / Goto		REPEAT		Green / APP / Repeat
	SUBTITLE		Subtitle / EQ		A-B		Yellow / YouTube / Repeat





Original	Replacement	Original	Replacement
	<<		<< / Preset-
	>>		>> / Preset+
	PROGRAM		TV/Radio /
	DISPLAY		Display / Media
	<<		<< / Tune-
	>>		>> / Tune+

Original	Replacement	Original	Replacement

