























































Original	Replacement	Original	Replacement
Power	 Power	Disc	 D.Menu / Top
Mute	 Mute / Dimmer	Setup	 Setup / OPT /
Play	 Play / Slow	Go To	 Text / Goto
Pause	 Pause / Step / Freeze	Card / USB	 AV / Input / RDS
Stop	 Stop / Hold	Menu	 Menu / Home
<<	 << / Tune-	Up	 Up
>>	 >> / Tune+	Left	 Left
I<<	 I<< / Preset-	Enter	 OK
>>I	 >>I / Preset+	Right	 Right
Title	 Sound / Title	Clear	 Exit / Cancel / Clear
Language	 Audio / Lang I/II	Down	 Down
Subtitle	 Subtitle / EQ	Resume	 Back / Return
Eject	 Eject / Surround	Vol+	 Vol+
PBC	 Picture / Format	DVD/DVB	 Smart / List
Zoom	 Zoom / Size	Vol-	 Vol-
L/R	 Sleep / Timer	OSD	 Display / Media
Prog	 TV/Radio /	1	 1



Original	Replacement	Original	Replacement
2	 2		
3	 3		
4	 4		
5	 5		
6	 6		
7	 7		
8	 8		
9	 9		
10+	 Guide / EPG / -/--		
0	 0		
Repeat	 Green / APP / Repeat		
A-B	 Yellow / YouTube / Repeat		
Slow	 +  Shift + Play /		
Step	 +  Shift + Pause / Step /		
3D	 +  Shift + 3		
Card / USB	 +  Shift + 8		

