



Original		Replacement		Original		Replacement	
	Mute		Mute / Dimmer		Vol-		Vol-
	Power		Power		OK		OK
	1		1		Right		Right
	2		2		Vol+		Vol+
	3		3		Down		Down
	4		4		CH-		CH- / Page-
	5		5		Red		Red / Netflix / Search
	6		6		EPG		Guide / EPG / -/-
	7		7		Green		Green / APP / Repeat
	8		8		Audio		Audio / Lang I/II
	9		9		Yellow		Yellow / YouTube / Repeat
	Menu		Menu / Home		Subtitle		Subtitle / EQ
	0		0		Blue		Blue / Prime Video / Random
	Exit		Exit / Cancel / Clear		TTX		Text / Goto
	Up		Up		i		Info / Angle
	CH+		CH+ / Page+		FAV		Fav / Marker / PC
	Left		Left		Tv/Radio		TV/Radio /



Program



Original	Replacement
ROLL	Smart / List
PROG	Shift + TV/RADIO / Program
DIGEST	Display / Media
DEVICE	Picture / Format
REC	Rec / Rec Mode
ZOOM	Zoom / Size
STOP	Stop / Hold
PREV	I<< / Preset-
NEXT	>>I / Preset+
PLAY	Play / Slow
PAUSE	Pause / Step / Freeze
<<	<< / Tune-
>>	>> / Tune+

Original	Replacement

