






















 





 




 

 

 






 
 



 
















Original		Replacement		Original		Replacement	
	Power		Power		CH-		CH- / Page-
	1		1		Home		Menu / Home
	2		2		Voice		Display / Media
	3		3		Sources		AV / Input / RDS
	4		4		Up		Up
	5		5		Left		Left
	6		6		Wheel Up		>>  / Preset+
	7		7		Right		Right
	8		8		Wheel Down		<< / Preset-
	9		9		OK		OK
	Guide/List		Guide / EPG / -/--		Down		Down
	0/Quick Access		0		Back		Back / Return
	.../AD/SAP		Fav / Marker / PC		*		D.Menu / Top
	Vol+		Vol+		Red		Red / Netflix / Search
	CH+		CH+ / Page+		Green		Green / APP / Repeat
	Mute		Mute / Dimmer		Yellow		Yellow / YouTube / Repeat
	Vol-		Vol-		Blue		Blue / Prime Video / Random



