

 
 


Original	Replacement
Standby	Power
Open / Close	Eject / Surround
Prog	TV/Radio /
Shuffle	Blue / Prime Video / Random
Repeat	Green / APP / Repeat
A-B	Yellow / YouTube / Repeat
Title	Shift + Sound / Title
Display	Display / Media
Zoom	Zoom / Size
Menu	Menu / Home
Setup	Setup / OPT /
Return	Back / Return
Up	Up
Left / AM	Left
Select	OK
Right / FM	Right
Down	Down

Original	Replacement
Play/Pause	Play / Slow
Stop	Stop / Hold
I<< Skip / Tune-	I<< / Preset-
I<< Skip / Tune-	Shift + I<< / Preset-
Skip >>I / Tune+	>>I / Preset+
Skip >>I / Tune+	Shift + Skip >>I / Preset+
<< Search	<< / Tune-
Search >>	>> / Tune+
Volume+	Vol+
Speaker	D.Menu / Top
Test Tone	Text / Goto
Volume-	Vol-
Mute	Mute / Dimmer
Sound Effects	Sound / Title
Subtitle	Subtitle / EQ
Mode	Smart / List
Audio	Audio / Lang I/II





Original	Replacement	Original	Replacement
 Angle	 Info / Angle		
 Search Mode	 Red / Netflix / Search		
 1	 1		
 2	 2		
 3	 3		
 Clear	 Exit / Cancel / Clear		
 4	 4		
 5	 5		
 6	 6		
 +10	 Guide / EPG / -/--		
 7	 7		
 8	 8		
 9	 9		
 0	 0		

