



| Original | | Replacement | |
|----------|--------|-------------|-----------------------|
| | Power | | Power |
| | Vol+ | | Vol+ |
| | Vol- | | Vol- |
| | Home | | Menu / Home |
| | P+ | | CH+ / Page+ |
| | P- | | CH- / Page- |
| | Guide | | Guide / EPG / -/-- |
| | Source | | AV / Input / RDS |
| | Back | | Back / Return |
| | Exit | | Exit / Cancel / Clear |
| | OK | | OK |
| | Up | | Up |
| | Down | | Down |
| | Right | | Right |
| | Left | | Left |
| | Play | | Play / Slow |
| | Stop | | Stop / Hold |

| Original | | Replacement | |
|----------|---------------|-------------|------------------------|
| | Smart Colours | | Display / Media |
| | 123# | | 1 |
| | Rakuten Tv | | TV/Radio / |
| | Netflix | | Red / Netflix / Search |
| | FPlay | | Fav / Marker / PC |

