


















 



 



 


























 



 
























 
 



Original	Replacement	Original	Replacement
 Power	 Power	 Cancel	 Exit / Cancel / Clear
 Auto Off	 Shift + Power	 Repeat	 Green / APP / Repeat
 Sleep	 Sleep / Timer	 Random	 Blue / Prime Video / Random
 Muting	 Mute / Dimmer	 Tape	 Shift + 5
 1	 1	 CD	 Shift + 3
 2	 2	 Tuner	 Shift + 6
 3	 3	 AUX	 Shift + 7
 Disc	 Display / Media	 EQ	 Subtitle / EQ
 4	 4	 3D AI	 Smart / List
 5	 5	 << / Tune-	 << / Tune-
 6	 6	 I<< / Preset-	 I<< / Preset-
 +10	 Guide / EPG / -/--	 >>I / Preset+	 >>I / Preset+
 7	 7	 >> / Tune+	 >> / Tune+
 8	 8	 V.Bass	 Sound / Title
 9	 9	 </▼	 Left
 0	 0	 </▼	 Down
 Program	 TV/Radio /	 </▼	 CH- / Page-



Program



Original	Replacement	Original	Replacement
 Stop	 Stop / Hold		
 Play/Pause/▲	 Play / Slow		
 Play/Pause/▲	 Right		
 Play/Pause/▲	 Pause / Step / Freeze		
 Play/Pause/▲	 Up		
 Play/Pause/▲	 CH+ / Page+		
 Volume-	 Vol-		
 Volume+	 Vol+		

