
 







 















 















 
 










 

 

 


Original	Replacement
 Mute	 Mute / Dimmer
 Power	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 i / EPG	 Guide / EPG / -/--
 i / EPG	 Info / Angle
 0	 0
 List	 Smart / List
 Up / CH+	 CH+ / Page+
 Up / CH+	 Up

Original	Replacement
 Left / Vol-	 Left
 Left / Vol-	 Vol-
 OK	 OK
 Right / Vol+	 Vol+
 Right / Vol+	 Right
 Down / CH-	 Down
 Down / CH-	 CH- / Page-
 Exit	 Exit / Cancel / Clear
 Menu	 Menu / Home
 Rec	 Rec / Rec Mode
 Swap	 Back / Return
 Red / <<	 Red / Netflix / Search
 Red / <<	 << / Tune-
 Green / Play	 Play / Slow
 Green / Play	 Green / APP / Repeat
 Blue / >> / Text	 >> / Tune+
 Blue / >> / Text	 Blue / Prime Video / Random





Original		Replacement	
	Blue / >> / Text		Text / Goto
	Radio	 + 	Shift + 6
	Radio	 + 	Shift + TV/Radio / Program
	Yellow / Pause		Pause / Step / Freeze
	Yellow / Pause	 / 	Yellow / YouTube / Repeat
	Stop		Stop / Hold
	TV	 + 	Shift + 1
	TV		TV/Radio /
	F1		Sound / Title
	F2	 / 	Audio / Lang I/II

Original		Replacement	

