



Original		Replacement		Original		Replacement	
	Power		Power		3		3
	TV/Source		AV / Input / RDS		4		4
	Menu		Menu / Home		5		5
	Up / P+		Up		6		6
	Up / P+		CH+ / Page+		7		7
	Tools		Setup / OPT /		8		8
	Left / Vol-		Vol-		9		9
	Left / Vol-		Left		Info		Info / Angle
	Enter		OK		0		0
	Right / Vol+		Vol+		Pre-CH		Back / Return
	Right / Vol+		Right		TTX		Text / Goto
	Mute		Mute / Dimmer		[≡◆]		Zoom / Size
	Down / P-		Down				
	Down / P-		CH- / Page-				
	Exit		Exit / Cancel / Clear				
	1		1				
	2		2				

