



Original	Replacement	Original	Replacement
	Power		Power
	Display		Display / Media
	Setup		Setup / OPT /
	Mute		Mute / Dimmer
	Menu		Menu / Home
	Music		Red / Netflix / Search
	Copy		Info / Angle
	Zoom		Zoom / Size
	Tv System		TV/Radio /
	Browser		D.Menu / Top
	Vol-		Vol-
	Vol+		Vol+
	Guide		Guide / EPG / -/-
	Return		Back / Return
	Up		Up
	Left		Left
	OK		OK
	Right		Right
	Down		Down
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	Time Shift		Sound / Title
	0		0
	Goto		Text / Goto
	Rec		Rec / Rec Mode
	Play		Play / Slow
	Stop		Stop / Hold





	Original	Replacement		Original	Replacement
	TIMER	Timer		TIMER SLEEP	Sleep / Timer
	PAUSE/STEP	Pause/Step		STEP - FREEZE	Pause / Step / Freeze
	SLOW	I>/Slow		PC FAV MARKER	Fav / Marker / PC
	PREV	I<</Prev		PRESET-	I<< / Preset-
	RECLIST	ReclList		LIST SMART	Smart / List
	INS REPLAY	←/INS Replay		CH PAGE -	CH- / Page-
	CM SKIP	→/CM Skip		+ CH PAGE	CH+ / Page+
	NEXT	>>I/Next		PRESET+	>>I / Preset+
	A-B	A-B		YouTube REPEAT A-B	Yellow / YouTube / Repeat
	SUBTITLE	Subtitle		EQ SUBTITLE	Subtitle / EQ
	REPEAT	Repeat		APP REPEAT	Green / APP / Repeat
	FR	<</FR		TUNE-	<< / Tune-
	F1	F1		Prime Video RANDOM	Blue / Prime Video / Random
	SOURCE	Source		RDS AV INPUT	AV / Input / RDS
	AUDIO	Audio		LANG I/II AUDIO	Audio / Lang I/II
	FF	>>/FF		TUNE+	>> / Tune+

	Original	Replacement		Original	Replacement

