






 


 




 



 


















| Original | Replacement |
|--|--|
|  Power |  Power |
|  DVD |  Shift + 2 |
|  FM/AM |  Shift + 6 |
|  Display |  Display / Media |
|  Open/Close |  Eject / Surround |
|  Input Select |  AV / Input / RDS |
|  1 |  1 |
|  2 |  2 |
|  3 |  3 |
|  CH+ |  CH+ / Page+ |
|  4 |  4 |
|  5 |  5 |
|  6 |  6 |
|  CH- |  CH- / Page- |
|  7 |  7 |
|  8 |  8 |
|  9 |  9 |

| Original | Replacement |
|---|---|
|  Volume+ |  Vol+ |
|  Cancel |  Exit / Cancel / Clear |
|  0 |  0 |
|  -/-- |  Guide / EPG / -/-- |
|  Volume- |  Vol- |
|  I<< Skip |  I<< / Preset- |
|  Skip >>I |  >>I / Preset+ |
|  << Slow/Search |  << / Tune- |
|  Slow/Search >> |  >> / Tune+ |
|  Stop |  Stop / Hold |
|  Pause |  Pause / Step / Freeze |
|  Play / x1.3 |  Play / Slow |
|  Top Menu / Direct Navigator |  D.Menu / Top |
|  Up |  Up |
|  Menu / Play List |  Menu / Home |
|  Left |  Left |
|  Enter |  OK |







| Original | Replacement |
|----------|----------------------------------|
| | Right |
| | Smart / List |
| | Down |
| | Back / Return |
| | Yellow / YouTube / Repeat |
| | + Shift + 1 |
| | + Shift + Left |
| | + Shift + Right |
| | Green / APP / Repeat |
| | + Shift + Text / |
| | Sound / Title |
| | Sleep / Timer |
| | TV/Radio / |
| | + Shift + Exit / Cancel / Clear |
| | Rec / Rec Mode |
| | Info / Angle |
| | Text / Goto |

| Original | Replacement |
|----------|---------------------------|
| | Fav / Marker / PC |
| | Zoom / Size |
| | + Shift + Rec / Rec Mode |
| | Red / Netflix / Search |
| | Subtitle / EQ |
| | Picture / Format |
| | Audio / Lang I/II |
| | Mute / Dimmer |
| | Setup / OPT / |





| Original | Replacement |
|--|--|
|  Power |  Power |
|  Power AV |  Shift + Power |
|  1 |  1 |
|  2 |  2 |
|  3 |  3 |
|  4 |  4 |
|  5 |  5 |
|  6 |  6 |
|  7 |  7 |
|  8 |  8 |
|  9 |  9 |
|  0 |  0 |
|  $\geq 10 / -/--$ |  Guide / EPG / -/-- |
|  Tv/AV |  AV / Input / RDS |
|  CH+ |  CH+ / Page+ |
|  CH- |  CH- / Page- |
|  Tv Vol+ |  Vol+ |

| Original | Replacement |
|---|--|
|  Tv Vol- |  Vol- |

