










 





	Original	Replacement		Original	Replacement
	A1	 1			
	A2	 2			
	Stop	 Stop / Hold			
	Folder up	 Up			
	I<</Back	 I<< / Preset-			
	>>I/Next	 >>I / Preset+			
	Folder down	 Down			
	Prog	 TV/Radio /			
	Play (CD/USB)	 Play / Slow			
	Pause (CD/USB)	 Pause / Step / Freeze			
	Mode	 Picture / Format			

