

 
 
 
 
 
 


 
 
 








Original	Replacement
	Power
	Mute / Dimmer
	1
	2
	3
	4
	5
	6
	7
	8
	9
	Fav / Marker / PC
	0
	Recall / Mouse
	Picture / Format
	Sound / Title
	Audio / Lang I/II

Original	Replacement
	Sleep / Timer
	AV / Input / RDS
	CH+ / Page+
	Vol+
	Info / Angle
	CH- / Page-
	Vol-
	Shift + Menu /
	Shift + Step / Pause / Step /
	Shift + Picture / Format
	Setup / OPT /
	Up
	Left
	OK
	Right
	Menu / Home
	Down



